




1992-1998 Ford F250 F350 Installation Instructions

| Item NO. | Hardware List | Quantity |
|----------|----------------------|----------|
| 1 | Frame Mount Brackets | 2 |
| 2 | Double Bolts | 4 |
| 3 | Galvanized Keepers | 4 |
| 4 | Flat Washers | 8 |
| 5 | Lock Washers | 8 |
| 6 | Nuts | 8 |
| 7 | Winch Ready Billets | 1 Set |

Passanger Side

Driver Side

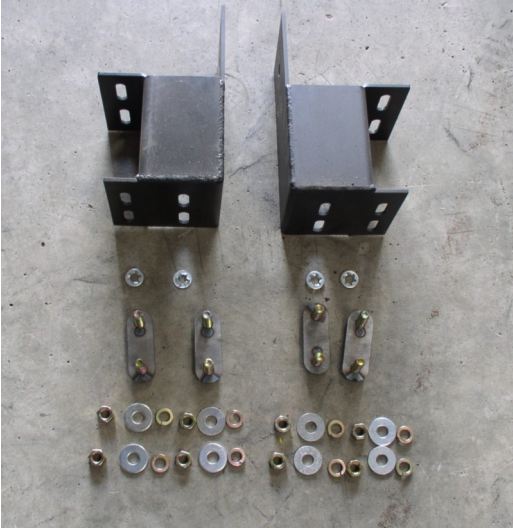

1. Start by Removing Stock Bumper and tow hooks. Install Winch in face of bumper

2. Install Double Bolt Plates to the inner bumper mount thru back side wholes provided, securing them with retaining keepers. Then attach frame mount bracket to bolts coming thru with Flat washers, lock wash-ers and nuts. Don't tighten down you need them to have some adjust-ment.





3. Then attach frame mount bracket to bolts coming thru with Flat washers, lock washers and nuts. Don't tighten down you need them to have some adjustment.



4. Measure distance between brackets and distance between frame. Then adjust the frame bracket to measurement. Then insert frame bracket into frame horn. Use Stock hardware through frame and mounting bracket. You might have to drill the frame horn for throw bolts. You will have up and down and side to side adjustment. Align the bumper to desired

